

Installation Guide

Effective April 2020

WELLNESS
Screens

wellness solutions





WELLNESS SCREENS INSTALLATION GUIDE

Wellness Screen Installation Guide

STEP 1: Secure the acrylic guard to the posts with supplied hex socket screws.


STEP 2: Secure the posts with supplied flat head screws.

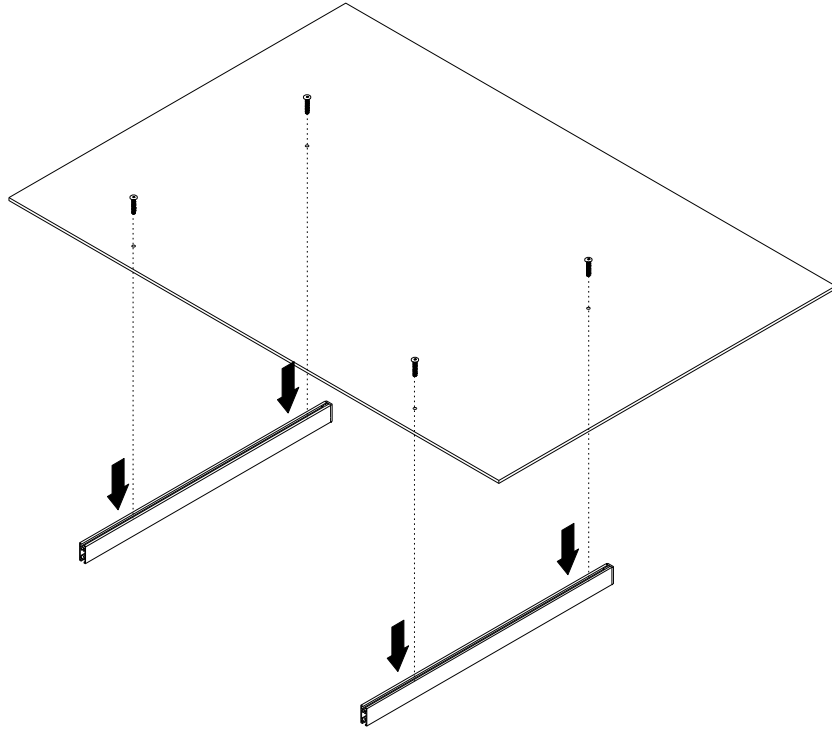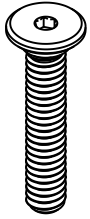

Undermounted Kit:

Drilling pattern

17.8mm (0.700") x 700mm (27.560")




Mounts through holes drilled through existing work surfaces and counter tops.

NOTE: Depending on the thickness of your top the 1.5" long supplied post screws might have to be recessed.

Kit includes 4x 1/4"-20 x 300mm hex socket screws to secure acrylic to posts and 4x 1/4"-20 x 1.5" flat head screws to secure posts.

Clamp Mounted Kit (1" and 1.5" clamp):


Kit includes 4x 1/4"-20 x 300mm socket screws to secure acrylic to posts and 4x 1/4"-20 x 1.5" flat head screws to secure posts.

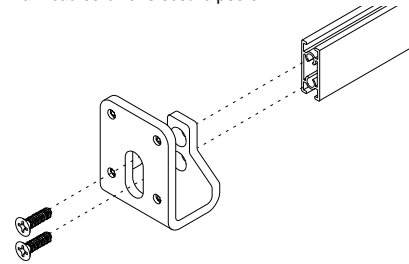

Surface Mounted With Plate Kit:

Kit includes 4x 1/4"-20 x 300mm socket screws to secure acrylic to posts and 4x 1/4"-20 x 1.5" flat head screws to secure posts.

NOTE: Screws required to mount Post plates to existing surface are not included

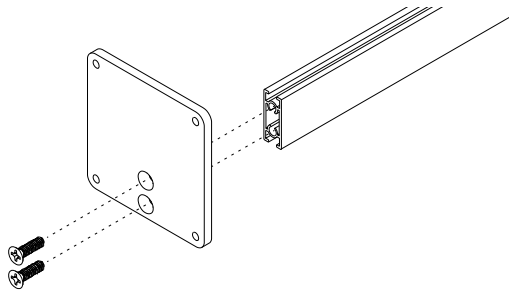

Freestanding Kit

Kit includes 12" deep 1" top with 3mm edging, 4x 1/4"-20 x 300mm socket screws to secure acrylic to posts and 4x 1/4"-20 x 1.5" flat head screws to secure

